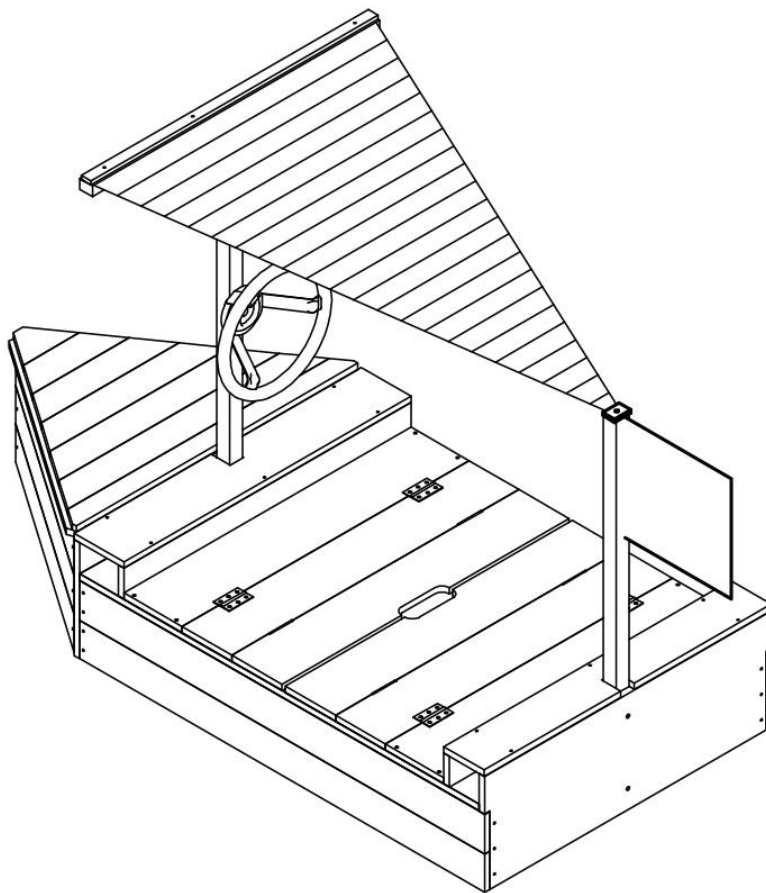 




6415 Sand Sailer assembly instructions.



Please note this product is for Adult Assembly ONLY

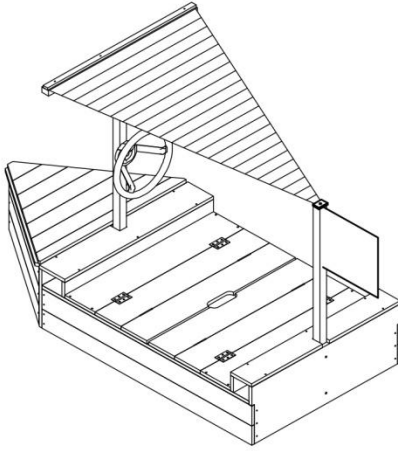 


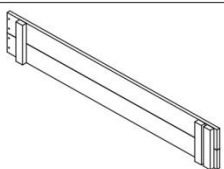 
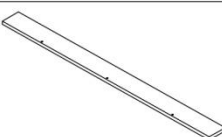 
 
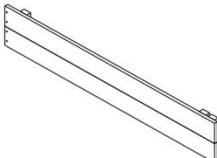 

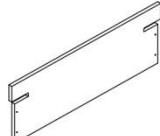 

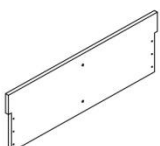 
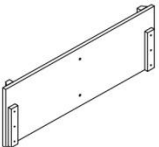 
 
 
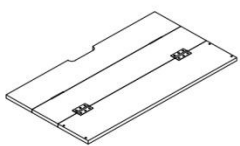 
 

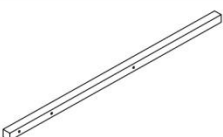 

 
Warning. Only for domestic use


 
 

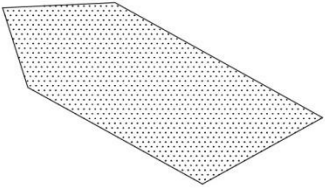 


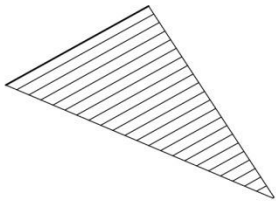 

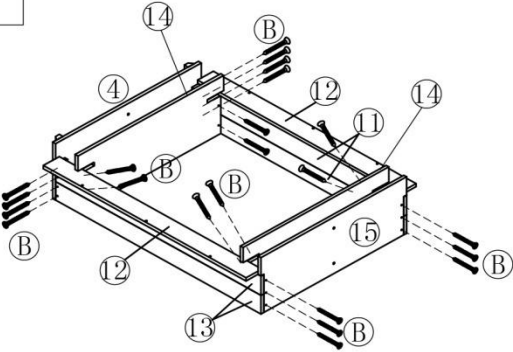 
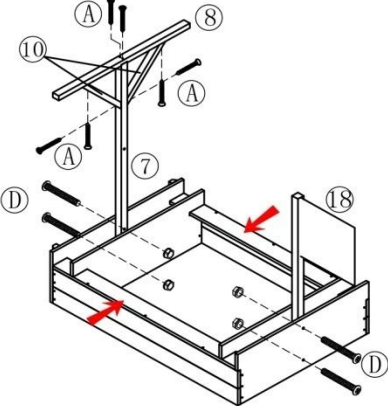 
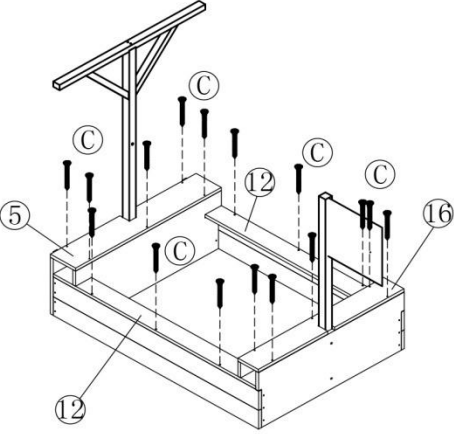 
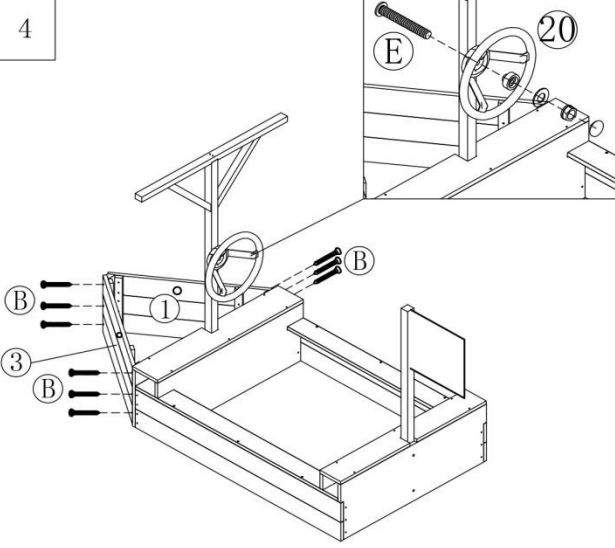 
Warning. Suitable for children aged 18months to 12 years

Warning. Suitable for outdoor use

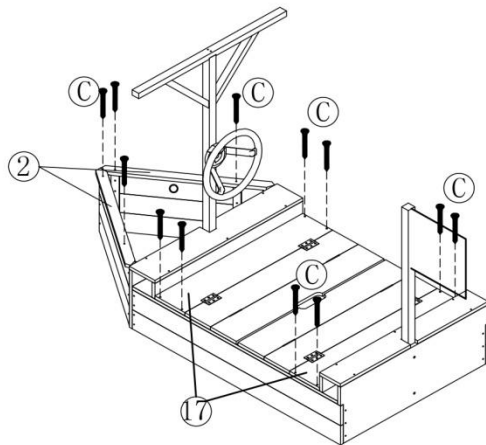 
Warning. Suitable for 1-4 users with a combined maximum weight of 200kg

Garden Games

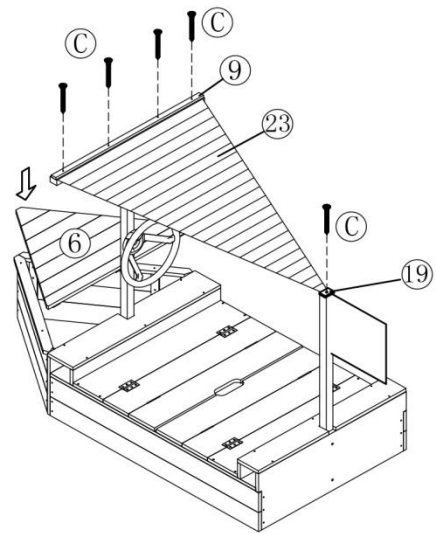 
			9		1PC	
			10		2PCS	
			11		1PC	
			12		2PCS	
1		1PC	13		1PC	
2		2PCS		14		2PCS
3		1PC				1PC
4		1PC		16		1PC
5		1PC	17		2PCS	
6		1PC	18		1PC	
7		1PC		19		1PC
8		1PC				

20		1PC	A	 3.5*40	6PCS
21		1PC	B	 3.5*35	31PCS
22		1PC	C	 3*30	33PCS
			D	 Ø6*60	4PCS
23		1PC	E	 Ø8*70	1PC
1					
2					
3					
4					

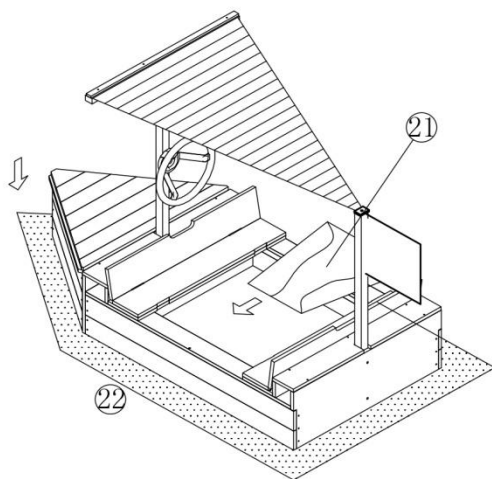 
5



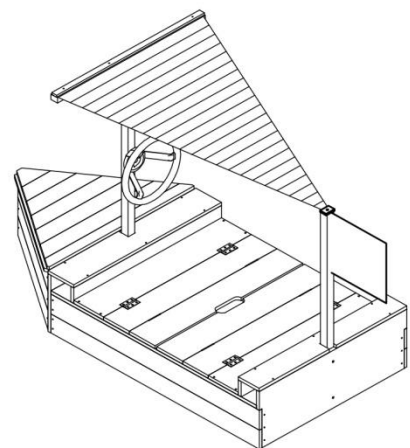 
6



7



8





Assembly instructions:

(Please retain these instructions for future reference.)

Warning. This product is for adult assembly only.

Place the Sandpit on a level surface at least 2 m from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires

Modifications made by the consumer to the original activity toy (for example the adding of an accessory) shall be carried out according to the instructions of the manufacturer

1. Fix one of the part 13's to the part 4 and screw into place using 35mm screws, then repeat with the other part 13. Fix the part 15 on to the other end of the part 13's and secure using 35mm screws. Now slot in the part 14's at each end and fix in to place again as shown in the diagram using the 35mm screws. The final part of this section is to slot the part 12's in so they sit flush with the outer edge of the side panels part 13. Please note the screw holes should be on the outer edge so you can fix into the part 13's.
2. Construct the sail using Parts 7, 8 and the support struts part 10. Secure as shown in the diagram using 40mm screws A. Now fix the mast in place at the front end (where part 4 is) and fix into place using 60mm bolt D. At the rear fix the flag pole using 60mm bolt D again. Screw holes will show you exact position.
3. Place part 5 at the front so it sits flush around the mast and secure using 30mm screws C. Repeat this process with part 16 at the rear so it sits flush around the flag pole. Now fix the parts 12 down also again using 30mm screws C.
4. Attach the front panels parts 1 and 3 as shown and screw into place using B screws 35mm. Now fix the steering wheel into place. Please note the fixing goes through the centre of the wheel (we recommend slotting the nut in first for ease of tightening and loosening. Ensure this is securely tightened.
5. Fix the edging part 2 on to the front of the boat (onto part 1 and 3) using 30mm screws C. Now attach the lid/seat sections part 17. Please note they need to be placed so they allow the hole to be formed in the middle to allow simple opening and closing of these sections, these should be fixed using 30mm screws C.
6. Slot panel 6 onto the front of the boat as shown to form a cupboard for storage. Fix the sail part 23 on to the mast using the baton part 9 and the 30mm C screws. Fix the other end to the flag pole using part 19 which sits on top of the sail when fixing. Secure with a 30mm screw C.



7. Lay out the underlay part 22 where you would like to place the sandpit. Place the Sandpit on top. Insert the sand liner part 21 and its now ready to fill with sand.

Maintenance instructions:

It is important you carry out regular checks on the sandpit to ensure all fixings are secure and no splinters are present.

If these checks are not done it could cause the sandpit to become a hazard.

We recommend the sandpit is checked prior to each use:

- replace defective parts in accordance with the manufacturer's instructions
- check all nuts and bolts for tightness and tighten when required
- check all coverings for bolts and sharp edges and replace when required
- it is very important these checks are done at the start of the usage season as well as regular intervals during use.

The Sand Sailer should be protected from severe weather conditions and be retreated regularly to prolong its life. As with all natural wooden products, some variation in colour may be apparent and the wood will expand and shrink in wet conditions and dry heat. As a result of this natural process some cracks and splits may occur which is normal. Wood products may also produce splinters over time, so care should be taken during assembly and in use.

The Sand Sailer should be placed on a flat surface such as grass or a patio.

The product is for domestic use by children between 18 months and 12 years of age only.

WARNING! Check equipment regularly for loose splinters, which may occur during use.



Garden Games Ltd,
Holly House, Pine Woods Road, Longworth, Oxfordshire, OX13 5HG, England
Tel [+44 \(0\) 1865 391060](tel:+44%201865391060)
www.gardengames.com